



North Rink Scoreboard Instructions

New Game:

1. Press FUNCTION, “1”, ENTER
2. Press AUTO HORN
3. Use CLOCK ON/OFF switch to START and STOP clock

Change Period:

1. Press PERIOD, be careful as sometimes it automatically changes period # a. To Reset period back to 1: press RESET, PERIOD
2. Press desired minutes, 0, 0 then hit CLOCK SET

Changing Clock/Game Time:

1. Press desired length (ex. 3,0,0 for a 3-minute penalty) then hit CLOCK SET

Entering a Penalty:

1. Enter player’s number (for example if they are #19 press 1,9)
2. Press either HOME or VISITOR PLAYER # button (2 minutes automatically goes up)
3. To change length of penalty time:
 - a. Press desired length of penalty (ex. 5,0,0 for a 5-minute penalty)
 - b. Press HOME or VISITOR PEN TIME button (below to the player # button)

To Remove Penalties:

1. Press RESET, input player’s #, press HOME or VISITOR PLAYER #

Set/Reset Score:

To Increase score:

1. Press Home/Visitor Goal (or the blue H/V buttons)
 - a. Do NOT press any # before pressing the “H/V Goal” buttons. It will not change the score to that number. Only increase it by that much.

To Reset Score:

1. Press Reset, Press Home/Visitor Goal (or the blue H/V button)
2. Press the desired score then press “H/V Goal” button TWICE