



# South Rink Scoreboard Instructions

## **New Game:**

1. Press FUNCTION, “1”, ENTER
2. Press AUTO HORN
3. Use CLOCK ON/OFF switch to START and STOP clock

## **Change Period:**

1. Press PERIOD, be careful as sometimes it automatically changes period #
  - a. To Reset period back to 1: press RESET, PERIOD
2. Press desired minutes, 0, 0 then hit CLOCK SET

## **Changing Clock/Game Time:**

1. Press desired length (ex. 3,0,0 for a 3-minute penalty) then hit CLOCK SET

## **Entering a Penalty:**

1. Enter player’s number (for example if they are #19 press 1,9)
2. Press either HOME or VISITOR PLAYER # button
  - a. 2 minutes automatically goes up
3. To change length of penalty time:
  - a. Press desired length of penalty (ex. 5,0,0 for a 5-minute penalty)
  - b. Press HOME or VISITOR PEN TIME button (below to the player # button)

## **To Remove Penalties:**

1. Press RESET, input player’s #, press HOME or VISITOR PLAYER #

## **Set/Reset Score:**

To Increase score:

1. Press Home/Visitor Goal (or the blue H/V buttons)

To Reset Score:

1. Press Reset, Press Home/Visitor Goal (or the blue H/V button)
2. Repeat “To Increase Score” instructions until it is at the desired score